



# INSTALLATION INSTRUCTION

COMPREHENSIVE ASSEMBLY GUIDE OF SHOWER ENCLOSURE. INSTALLATION WILL BE SIMPLE AND CLEAR.

## **ANA PLUS**



Classical design



Comfortable to bath and optically nice height



Strong and stable construction



Fixation of closed doors



Good tightness



Strong fixation of opened doors







Function of door lifting




Function of regulation of door's angle




























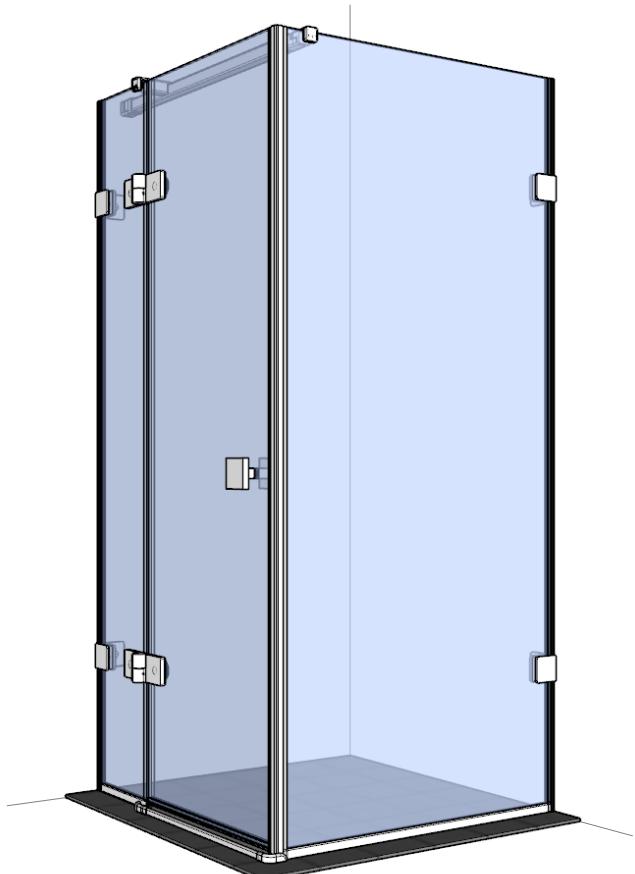
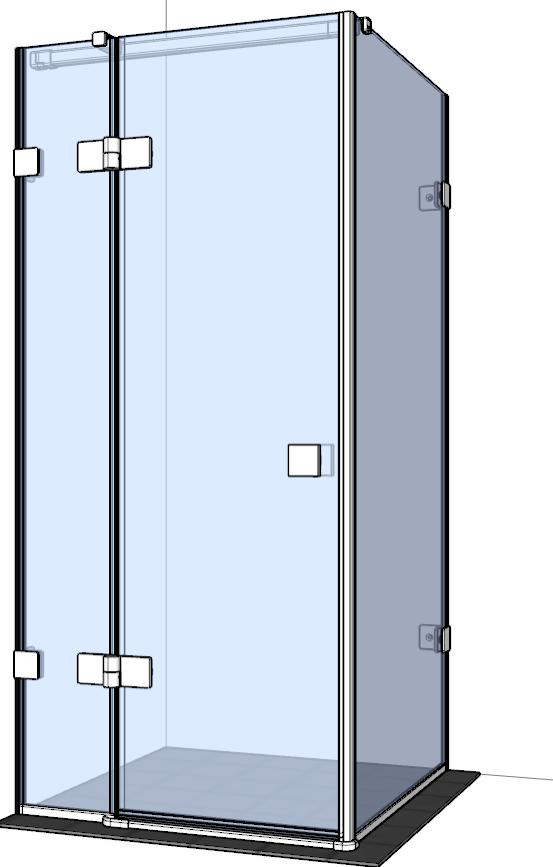
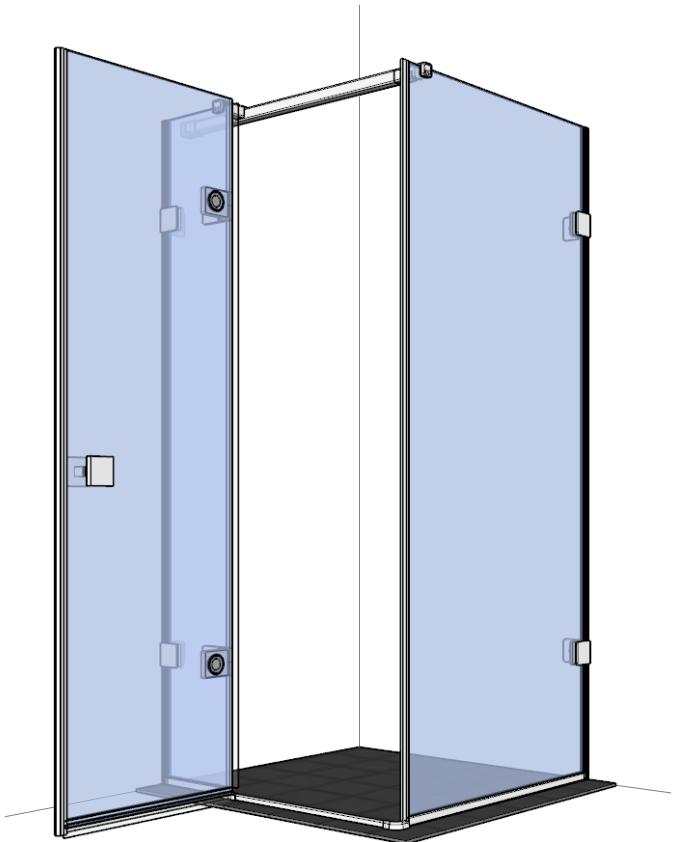
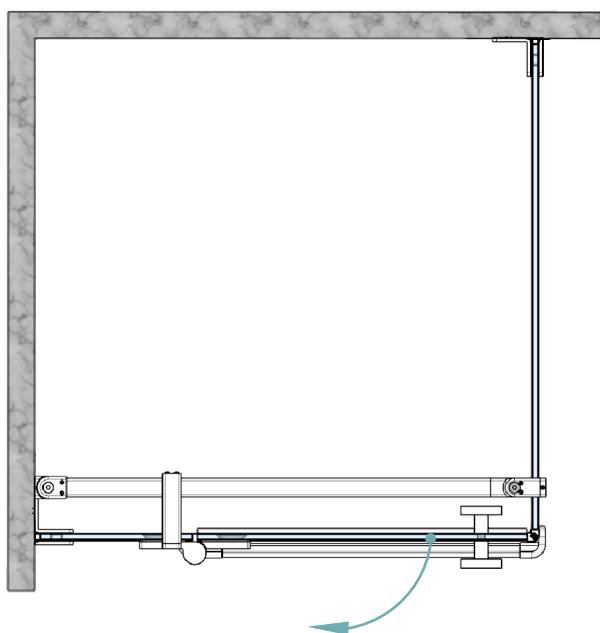


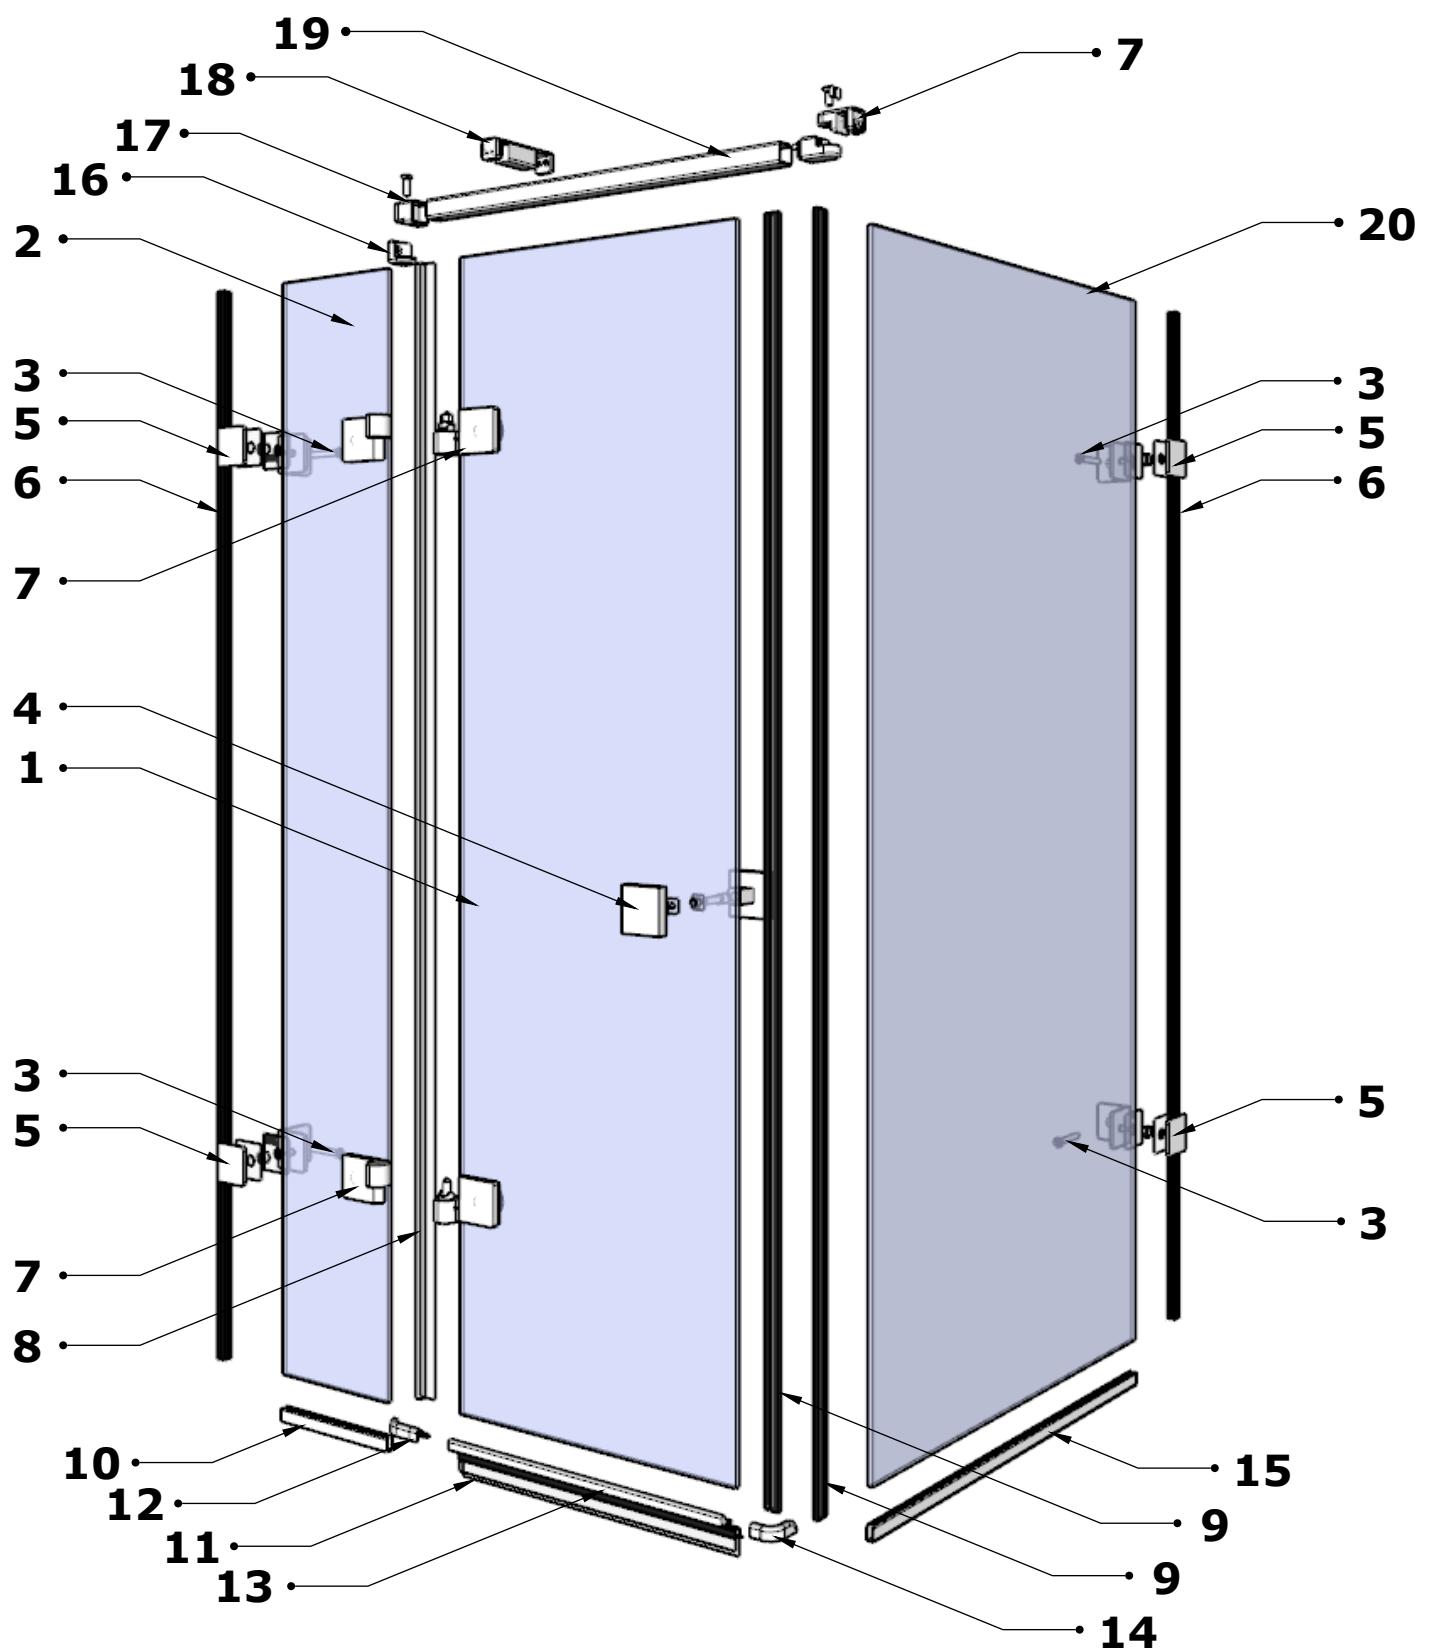

CE

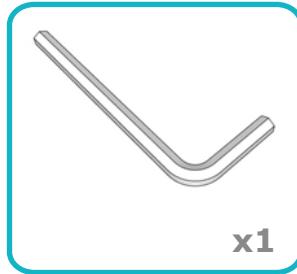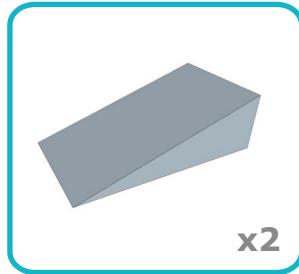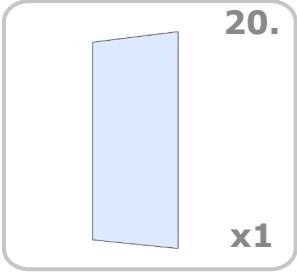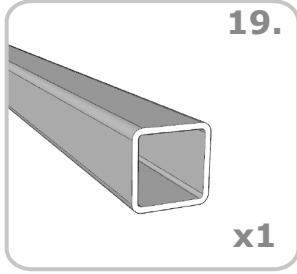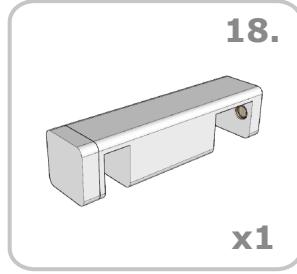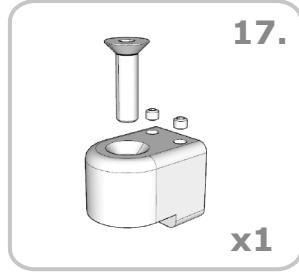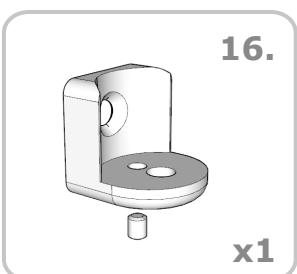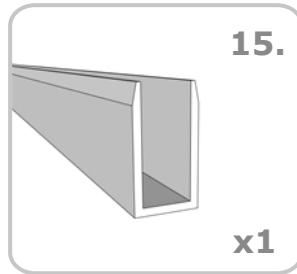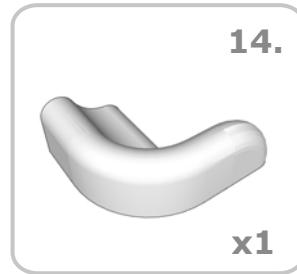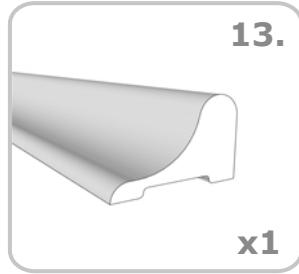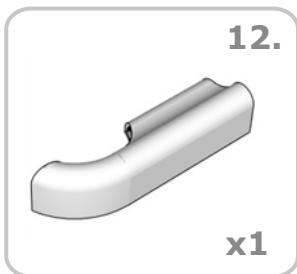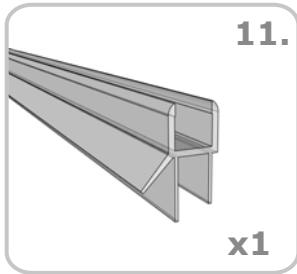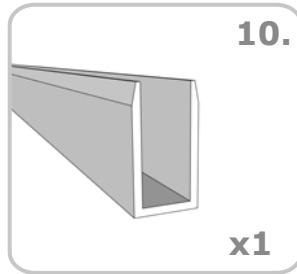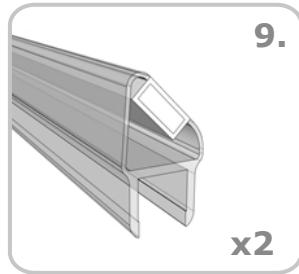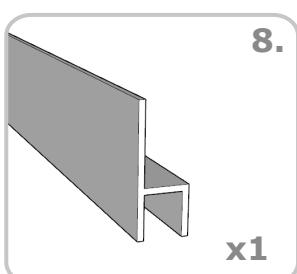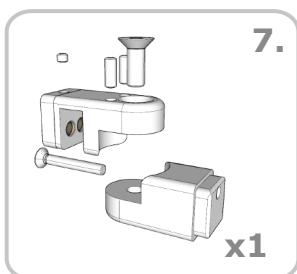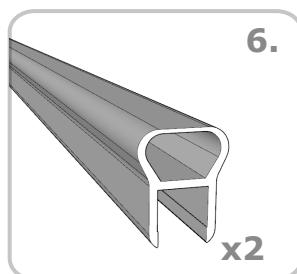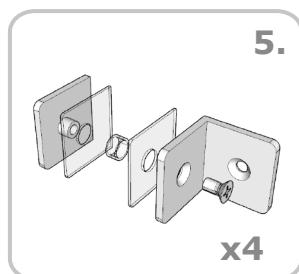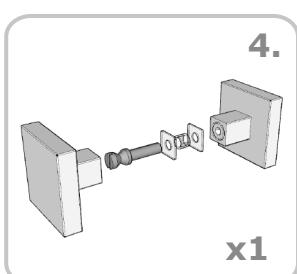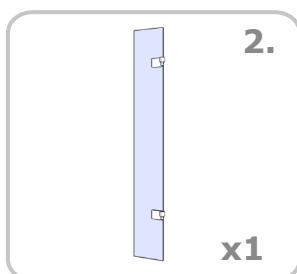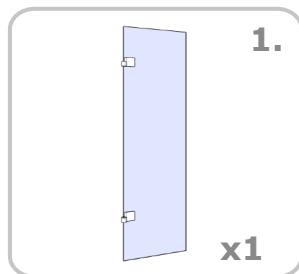



1

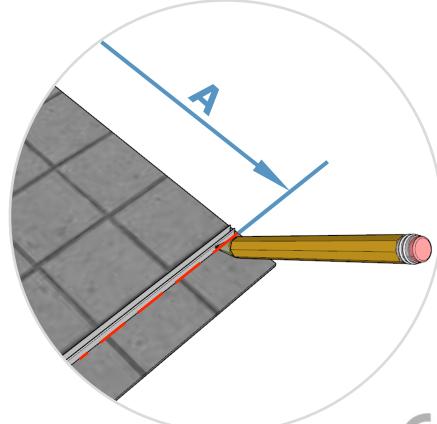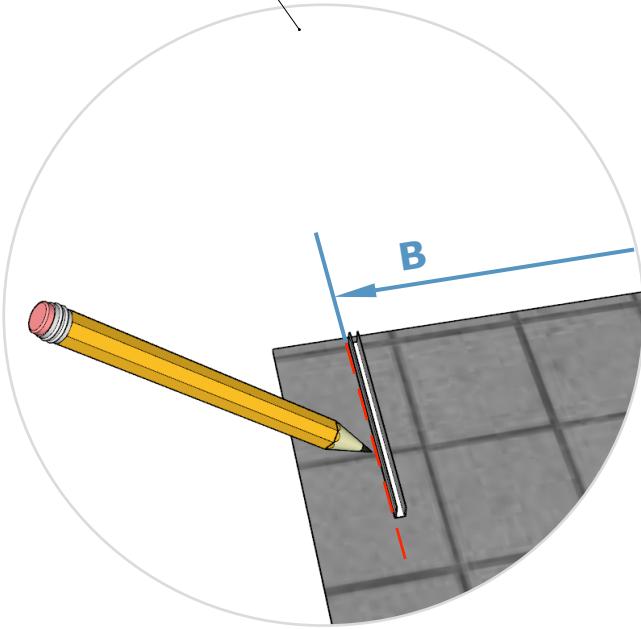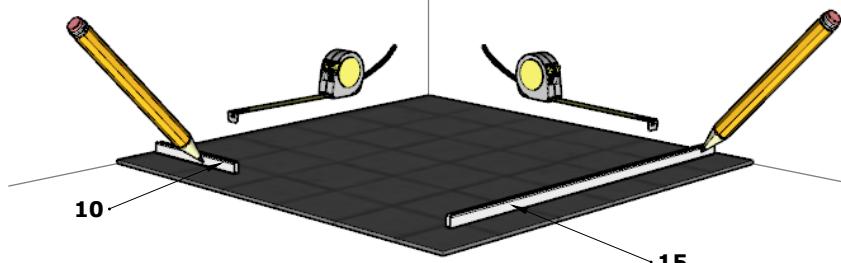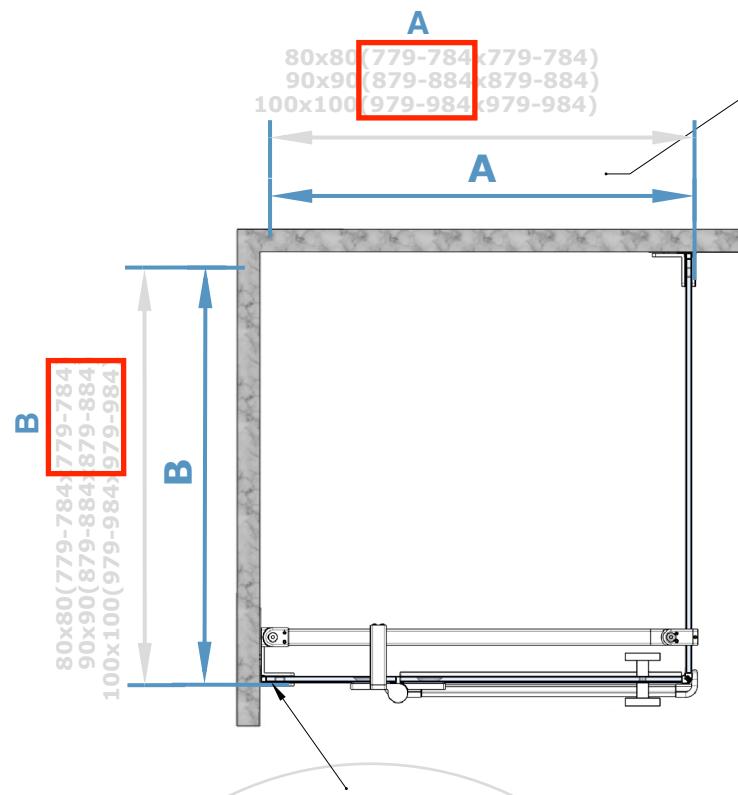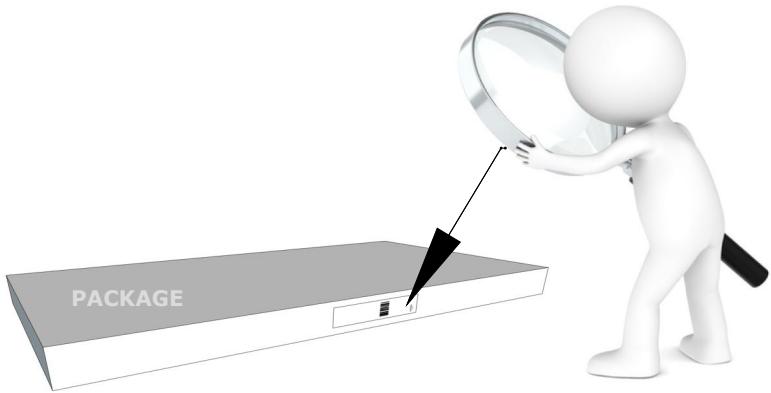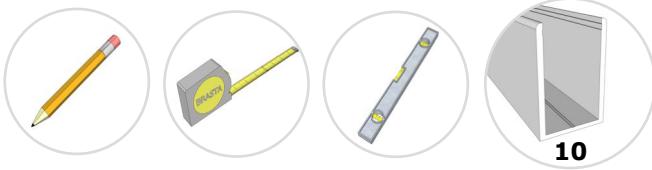


CE

5

2

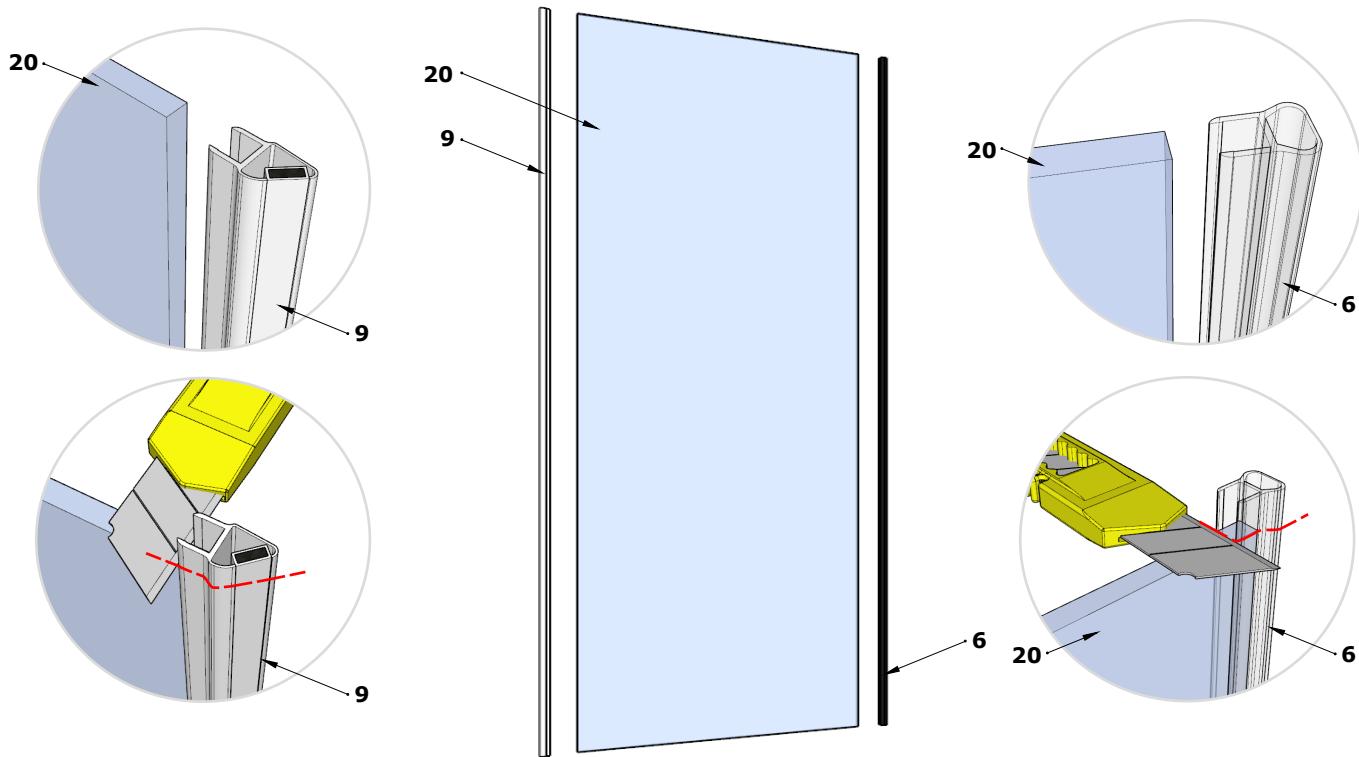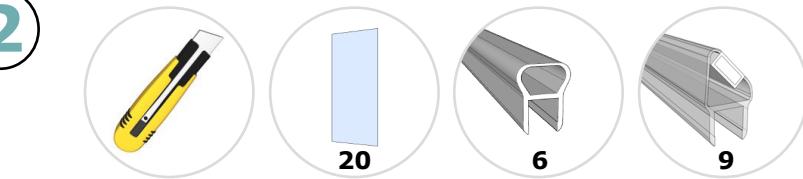



3

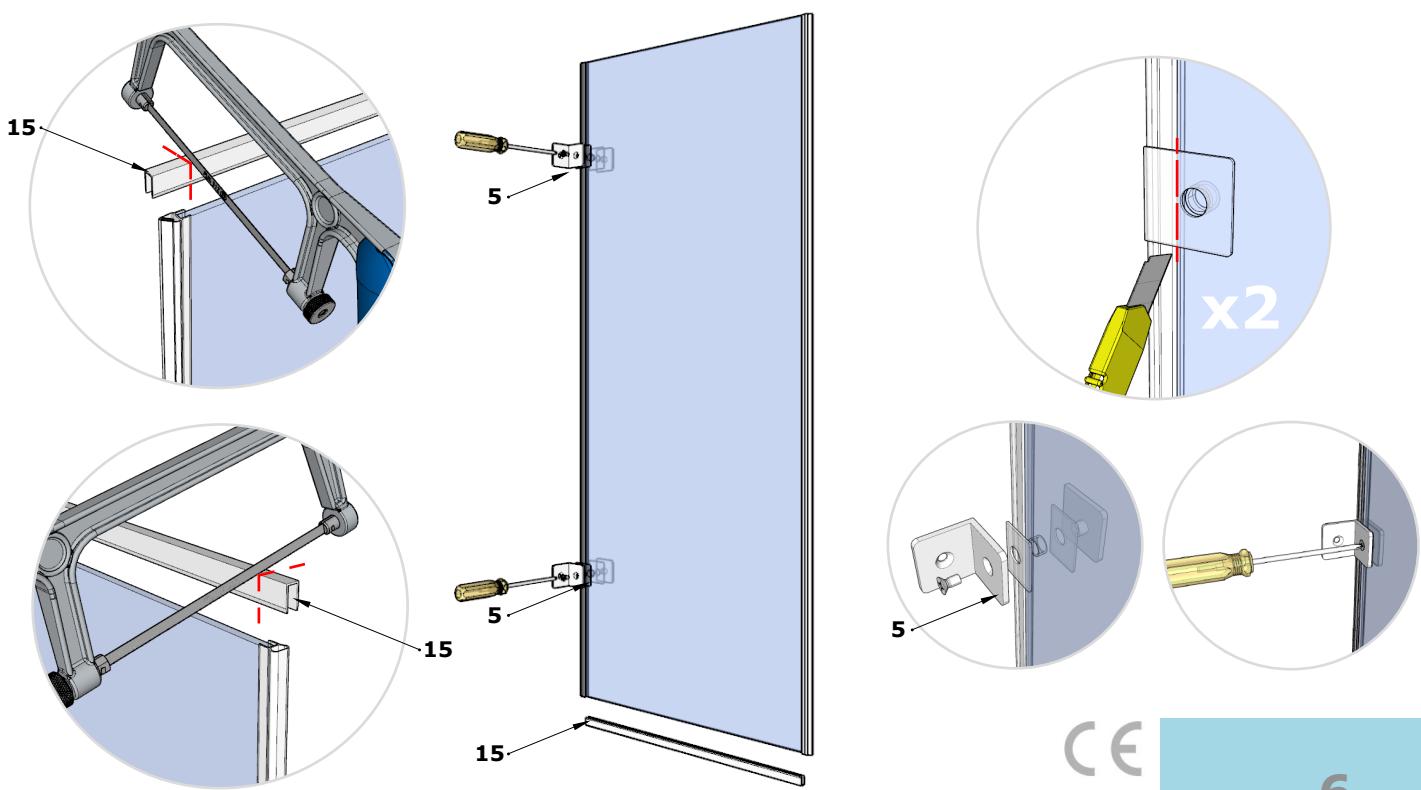


CE

6

4


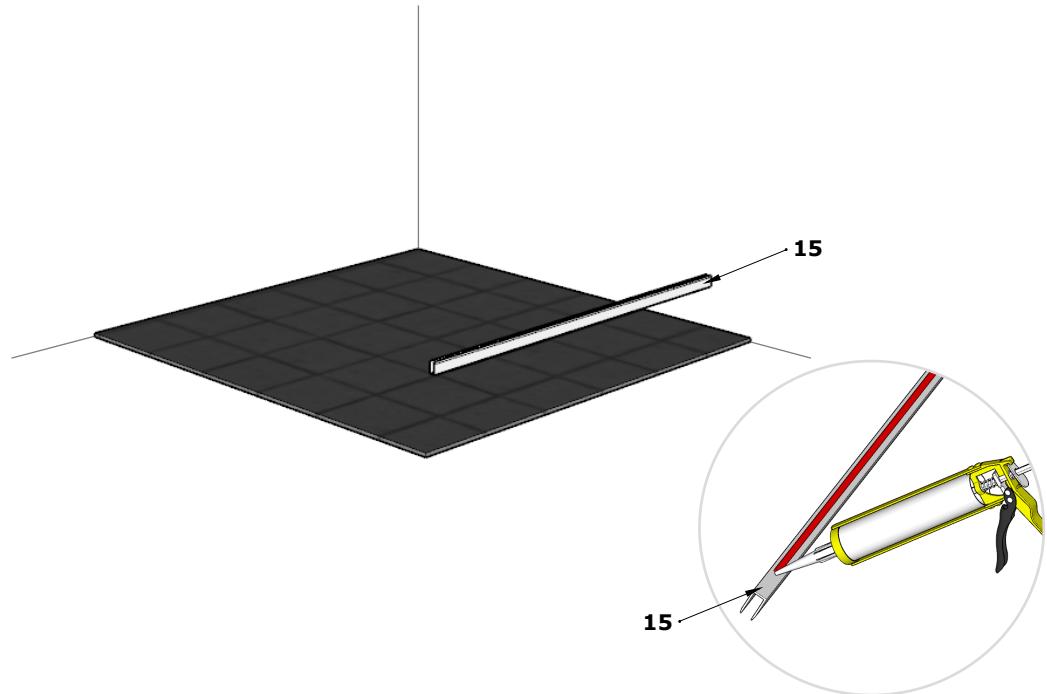
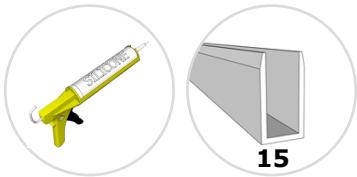


5





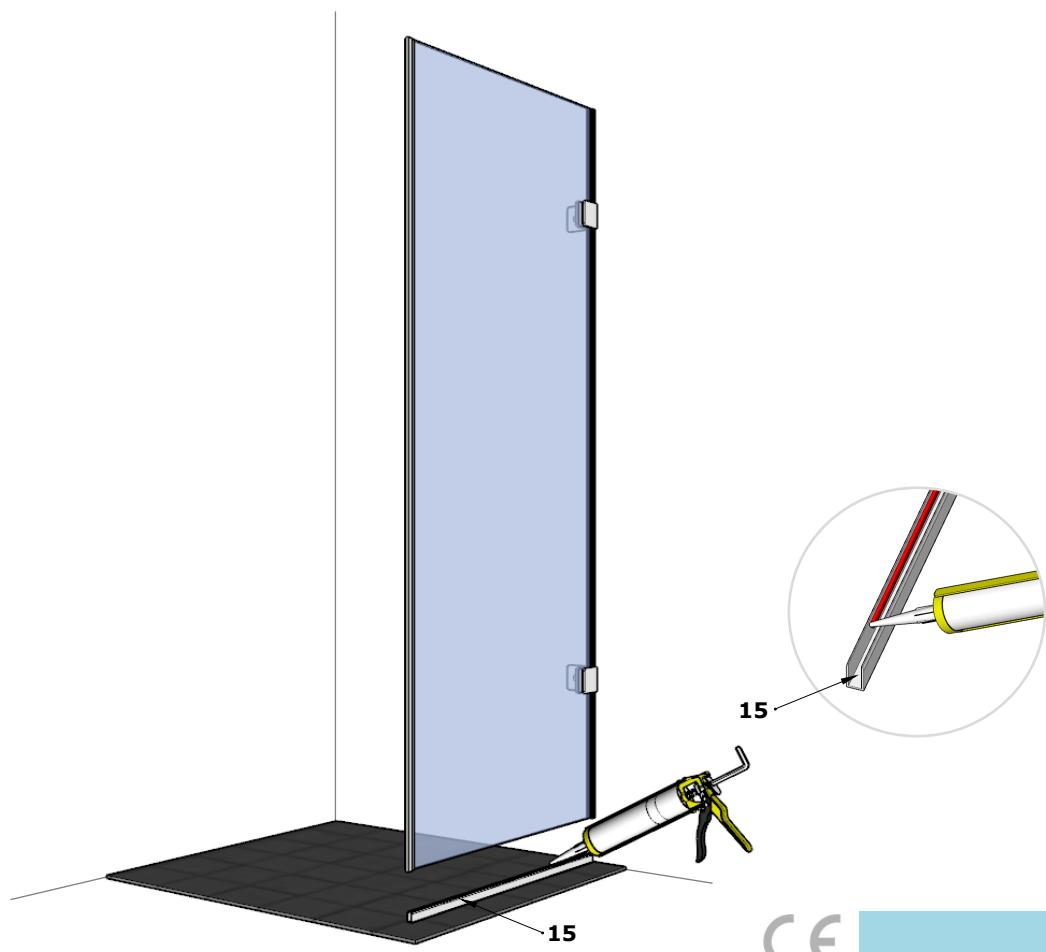


CE

6








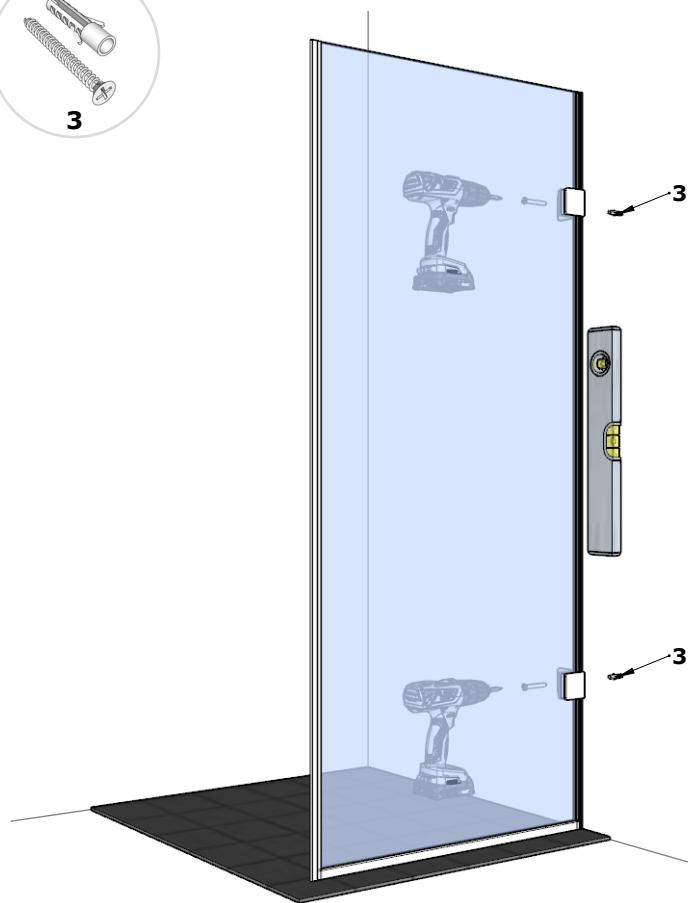
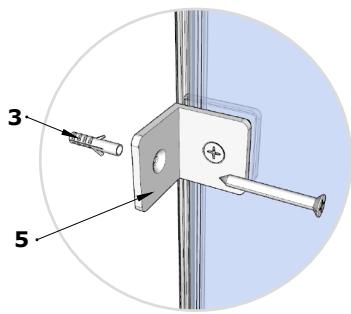
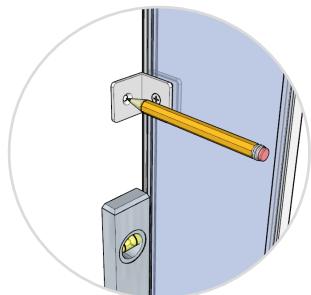


7




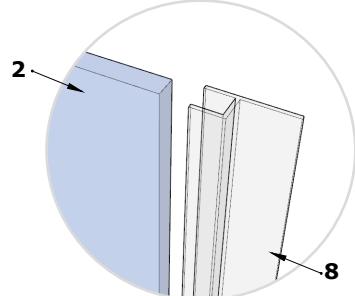
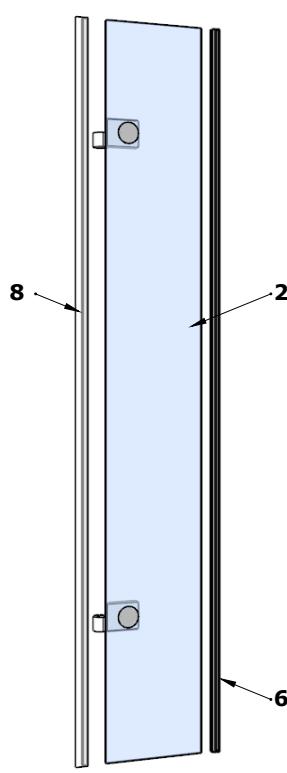
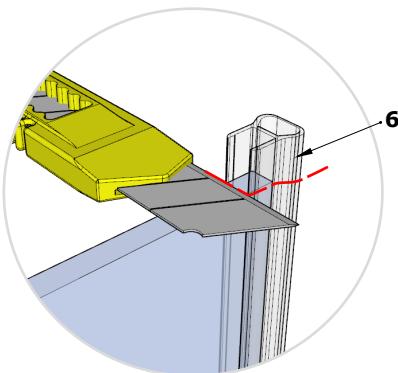
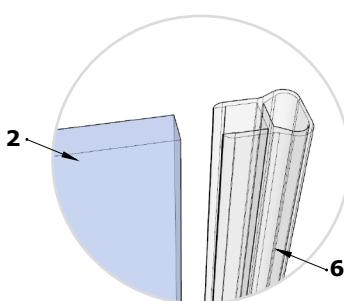
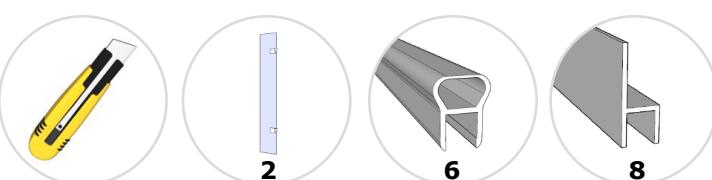


CE

8

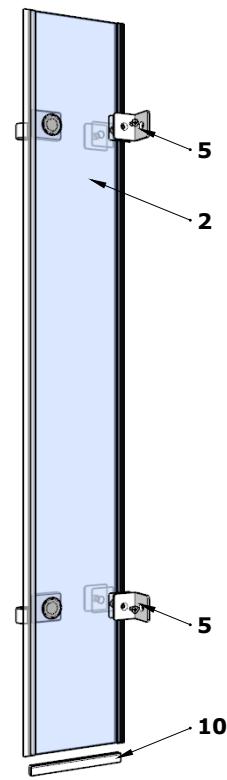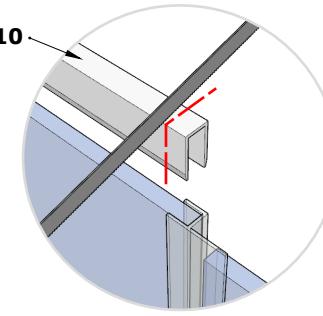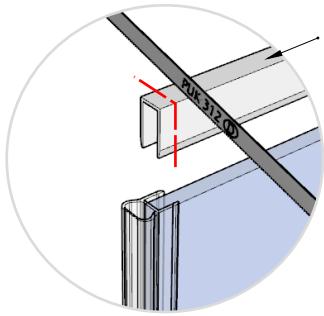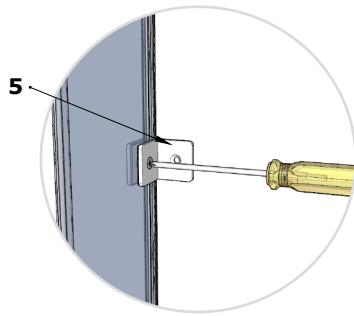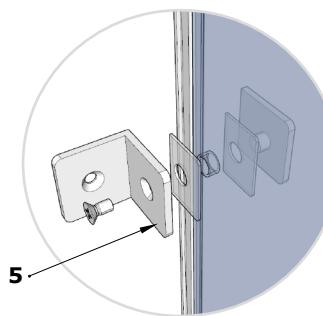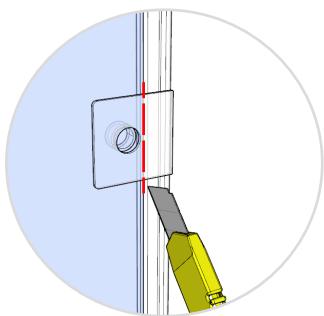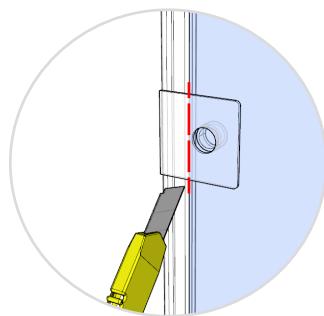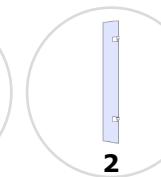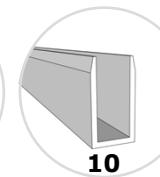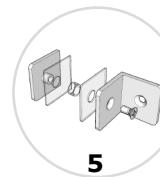


9

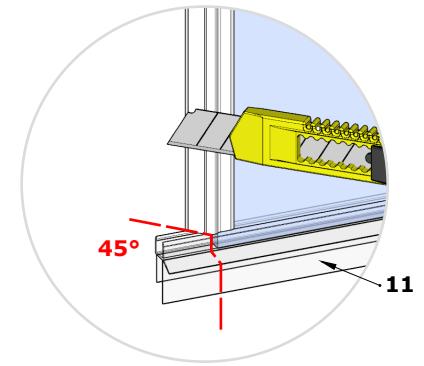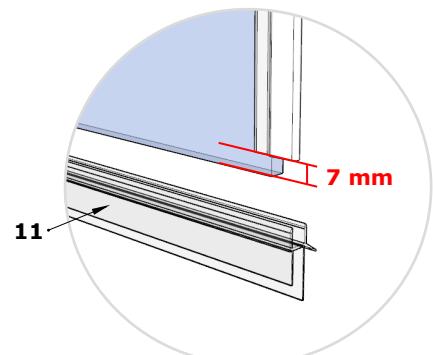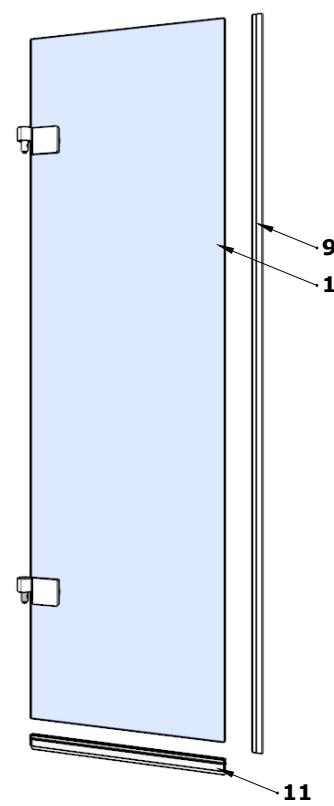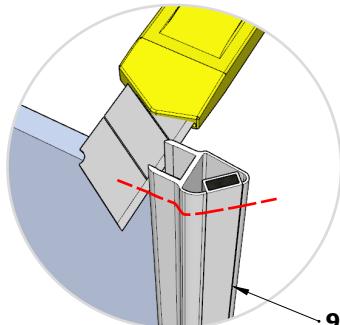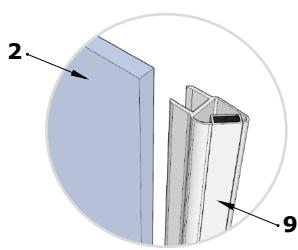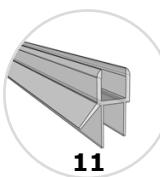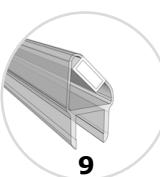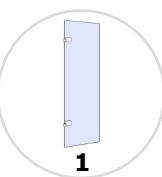

CE



9

**10**




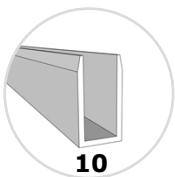


**10**

**11**

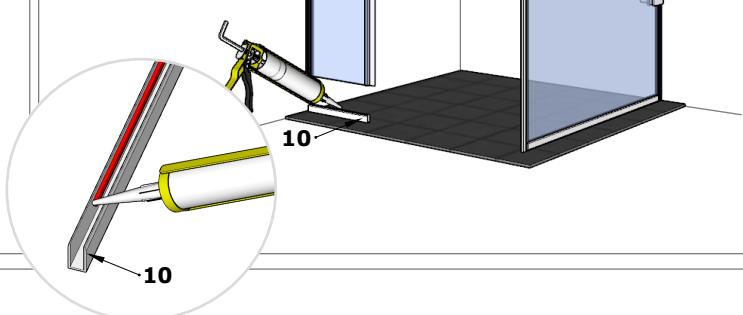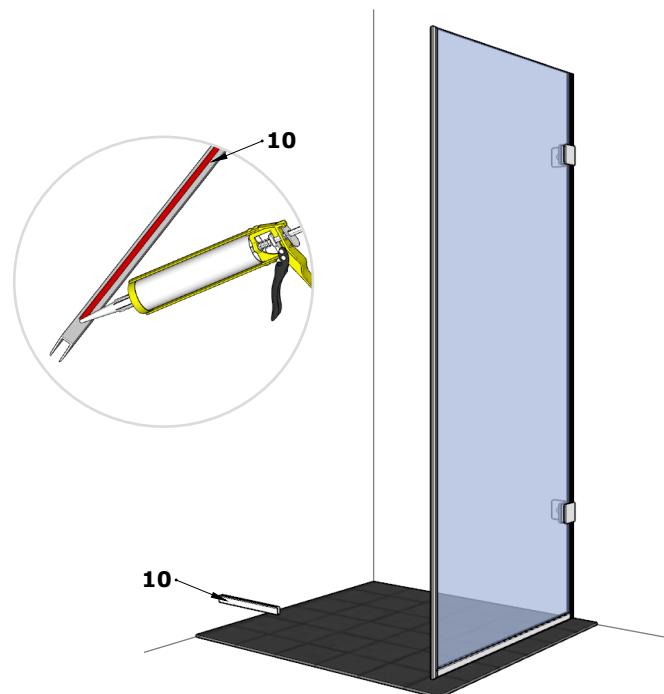




**12**

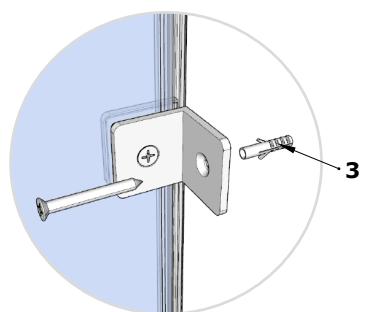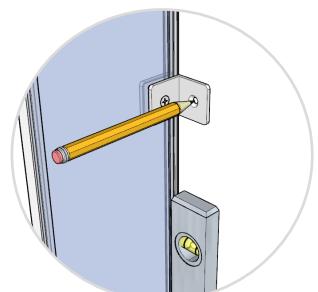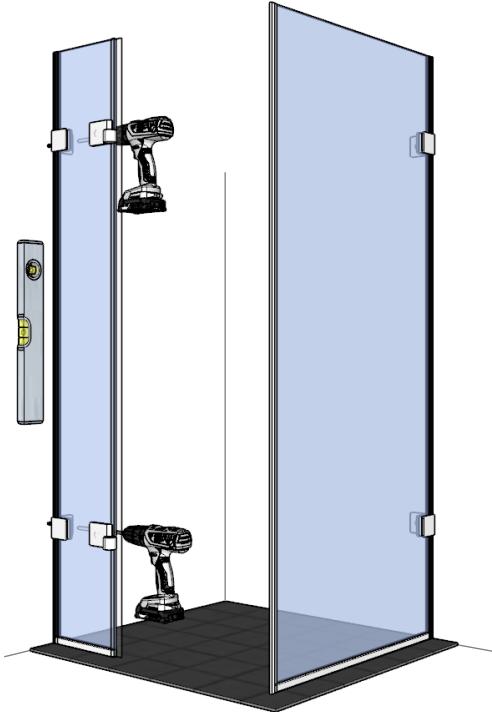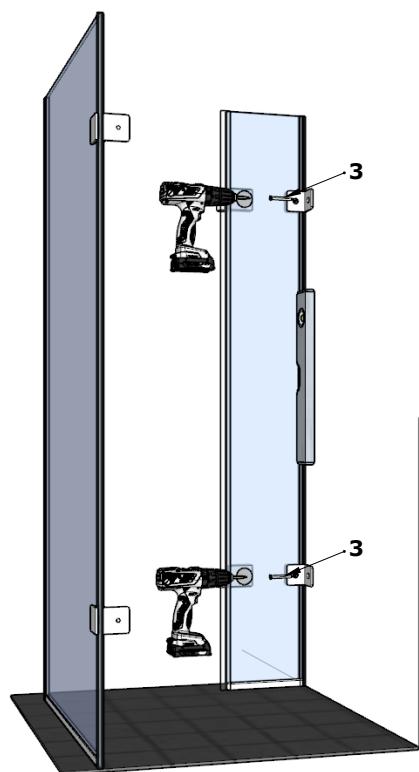




CE

**10**

13

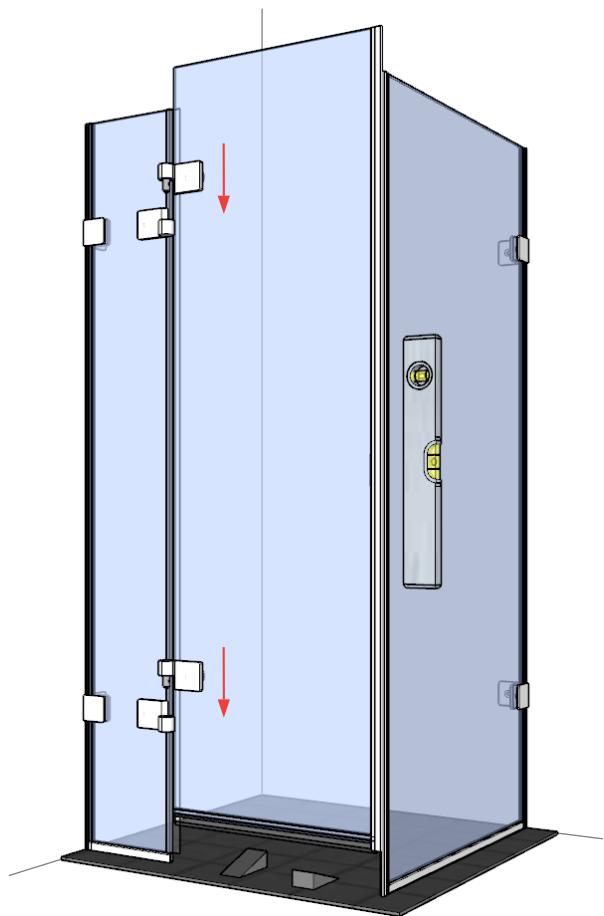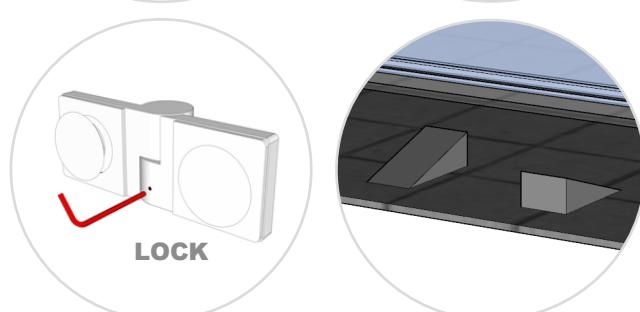
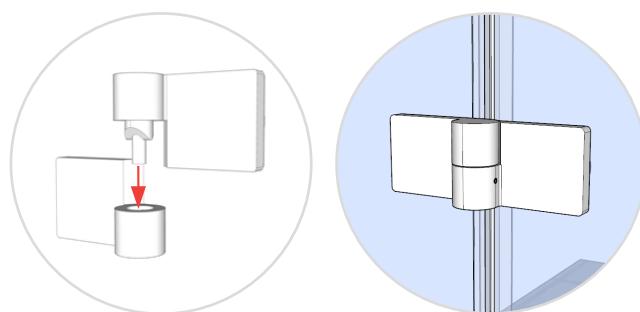


14

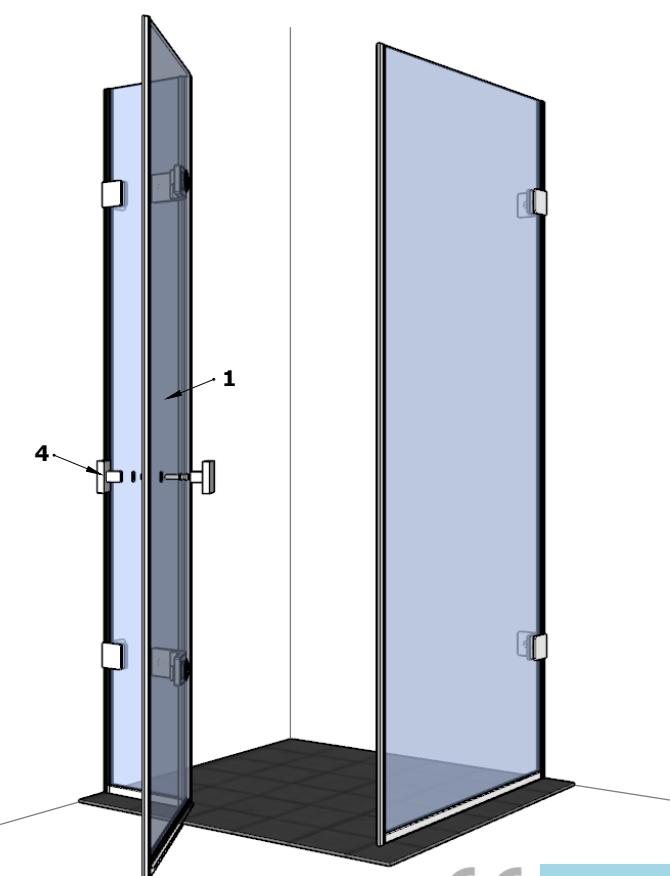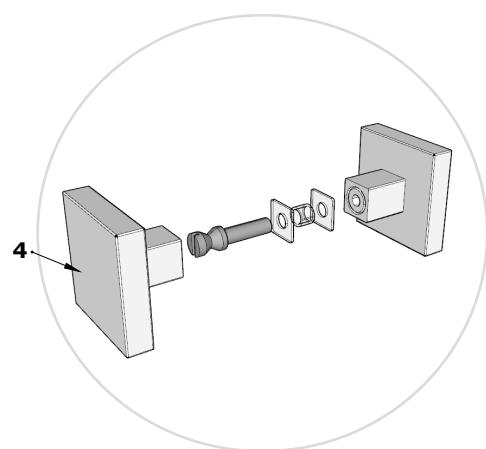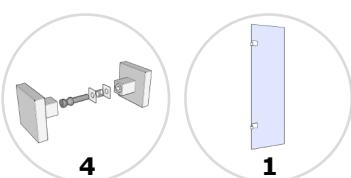


CE

11

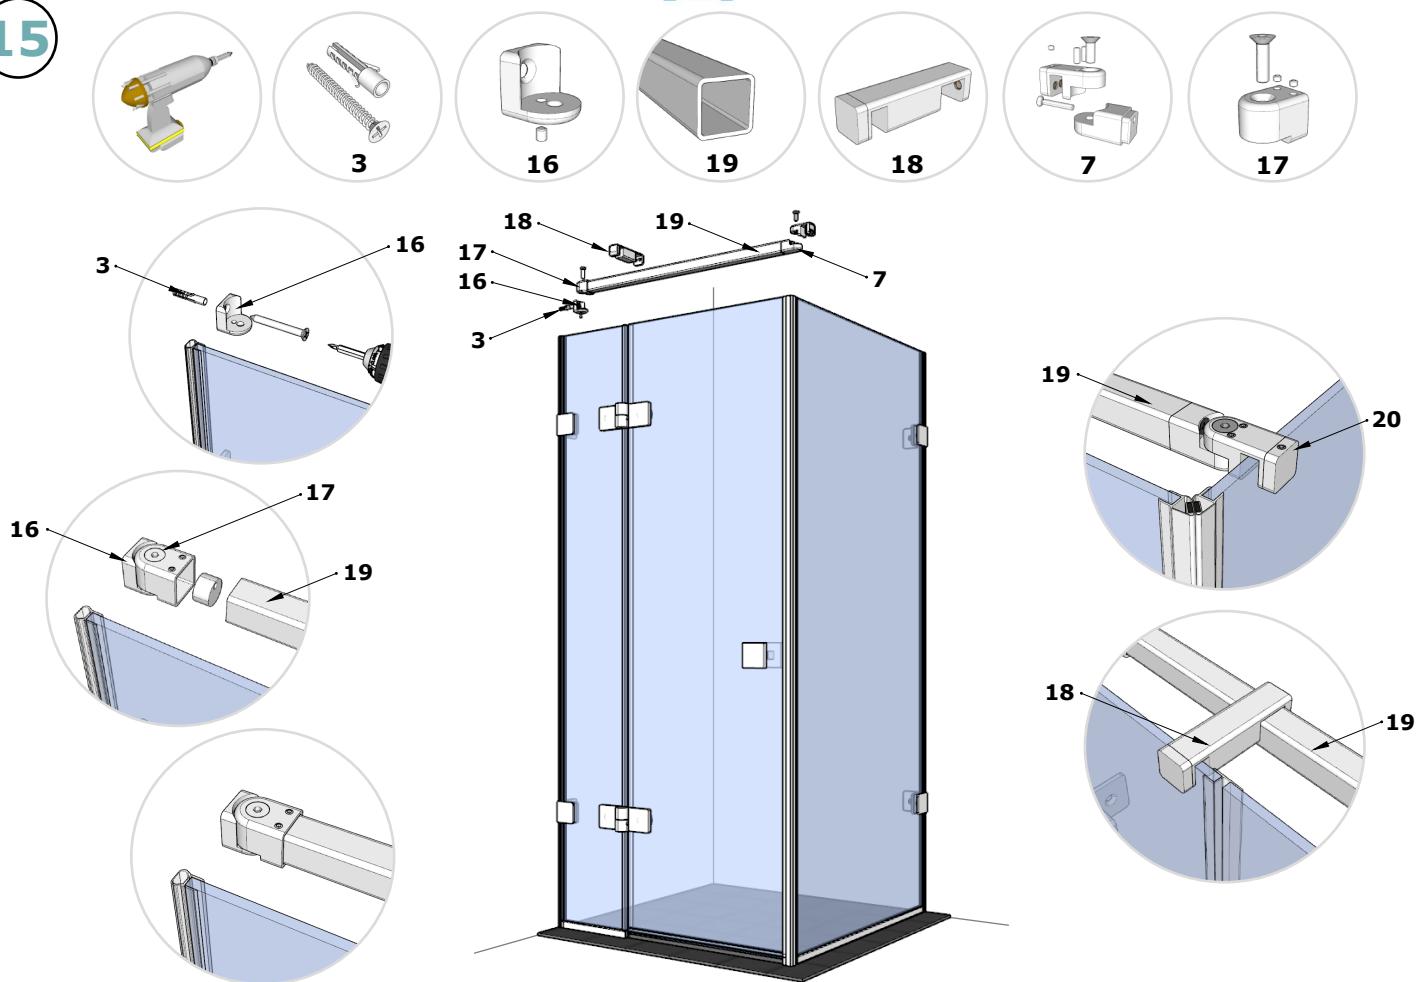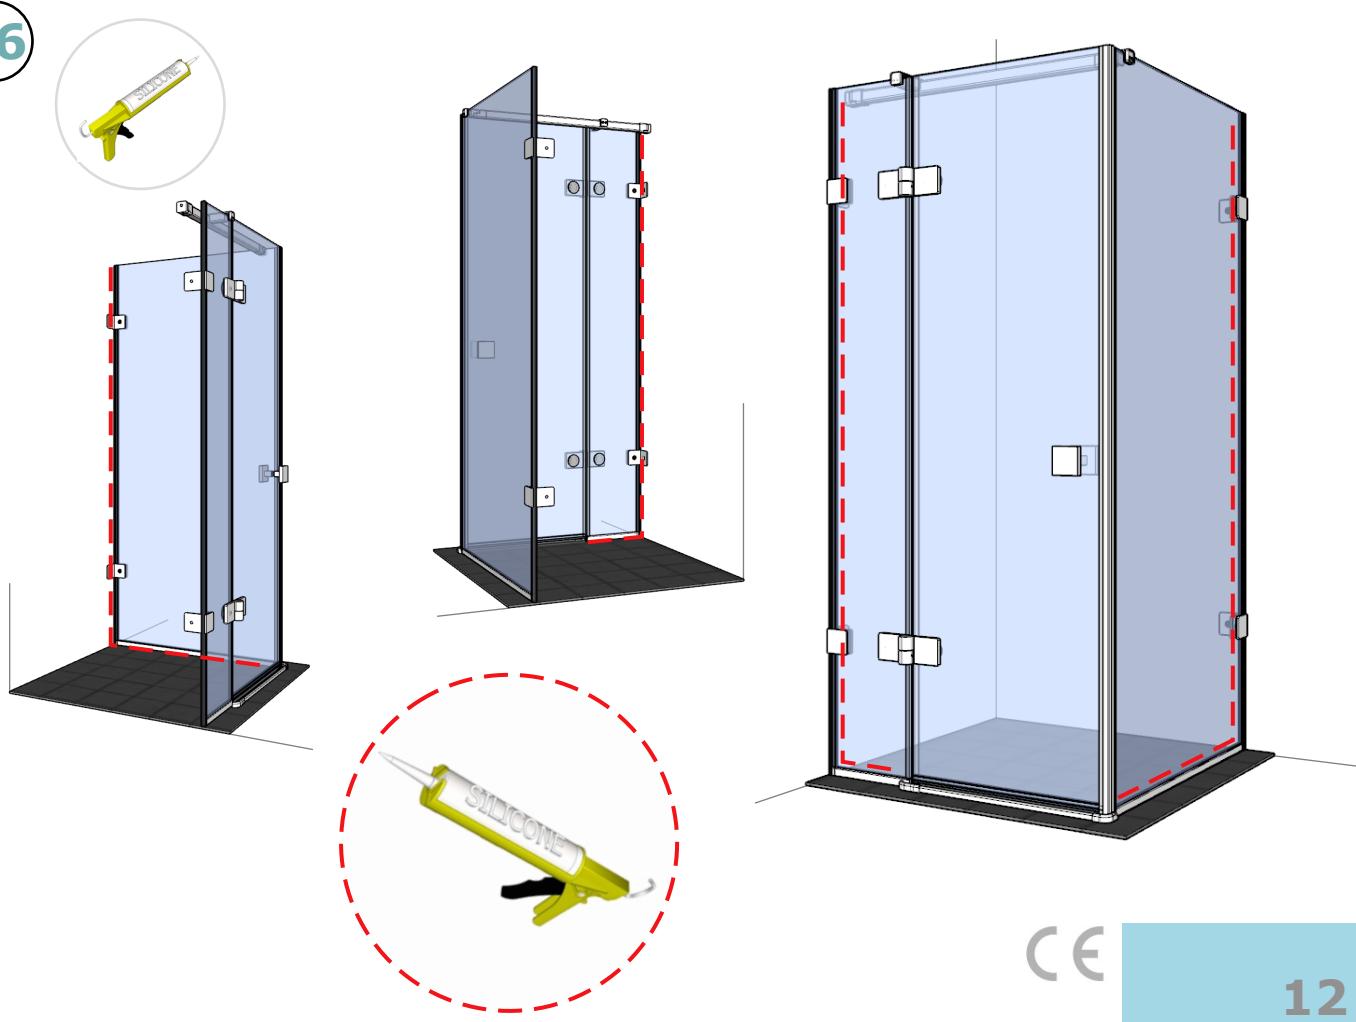**15**

**16**

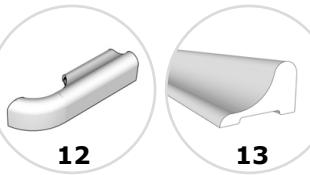
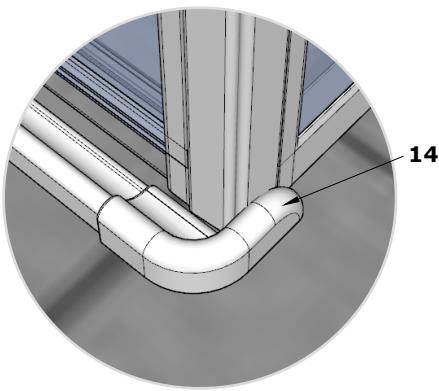
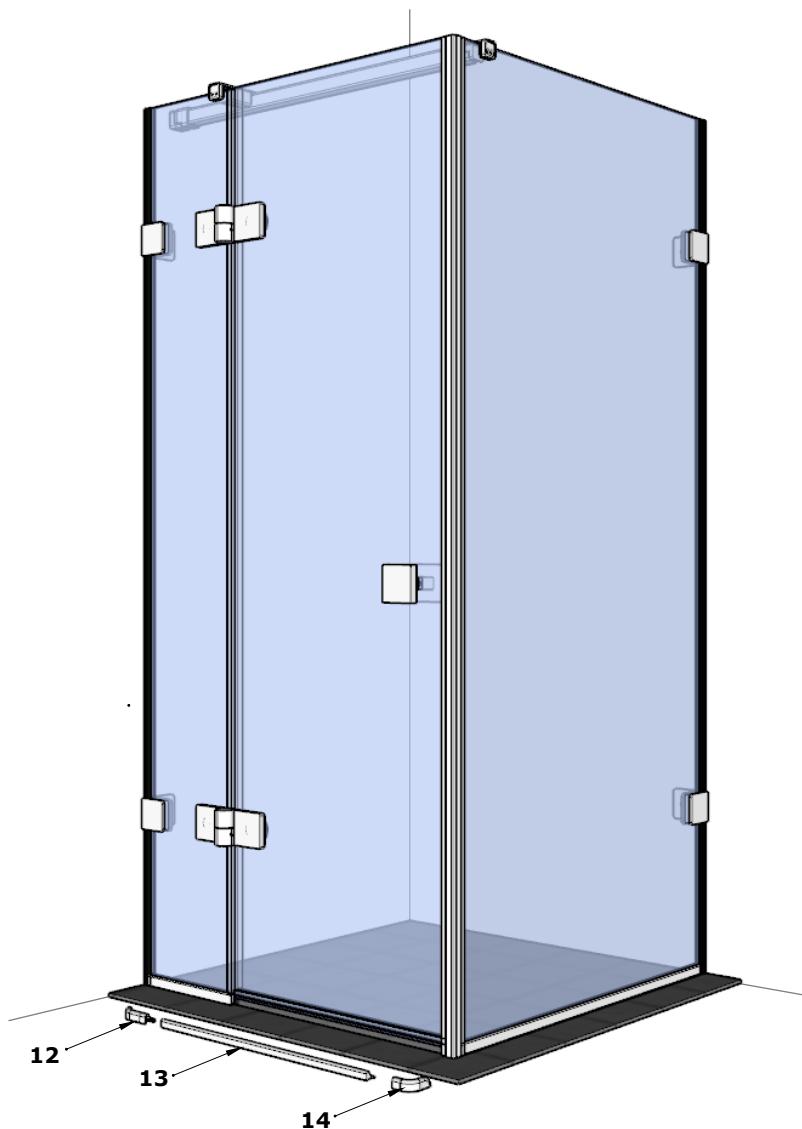
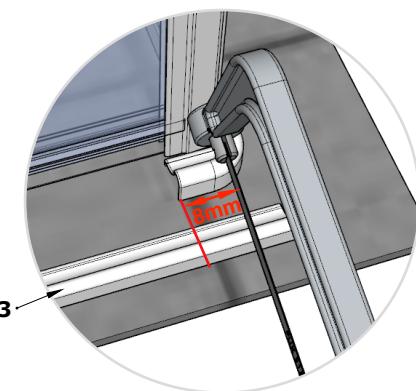
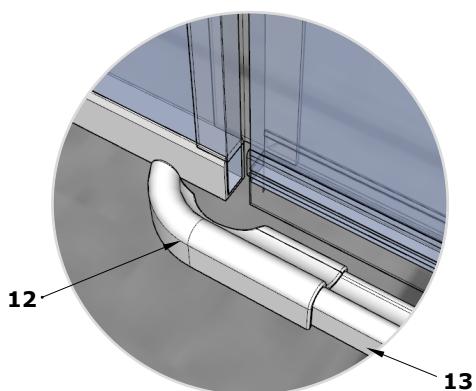
17



14

12

13



CE

13

